

4K HDMI USB KVM Extender over Cat6 – 230 feet – Zero Latency User Manual







Features


- Extend 4K@30Hz video up to 130ft/40m,
 1080p@60Hz video up to 230ft/70m
 through a Cat6 or above network cable with zero latency
- Supports USB extend for keyboard & mouse only
- Built-in EDID, HDMI 4K@30 4:4:4 8bits
- Supports HDR 10 & HDCP 1.4
- HDMI Audio Format: PCM 2/5.1/7.1, Dolby 5.1/7.1, DTS 5.1/7.1
- Supports wireless keyboard & mouse combos, multimedia function keys, wake up PC from sleep
- · Lightning Protection, Surge Protection, ESD Protection
- Automatically adjusts parameters to match different network cables and achieve the best display performance

Package Contents

- · Transmitter & Receiver
- Power adapter DC 5V/1A x2
- USB Type-A to A cable
- User Manual



Layout

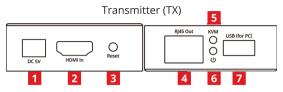

- 1. Power Jack: DC 5V/1A
- 2. HDMI Input: Connect to HDMI source
- 3. Reset Button: Press to restart the device
- 4. RJ45 Out: Connect to Receiver with Cat6 cable
- 5. KVM Indicator:

Light Off: the USB port and the computer have not established a connection

Light Flash: the KVM data is transmitting **Steady On:** the USB port is connected to the computer, but no KVM data is transmitted


6. Power/Signal Indicator:

Light Flash: it is powered on, but no video data is transmitted

Steady On: the video data is transmitting

USB Port: Connect to the USB port of PC for receiver's Keyboard & Mouse use.



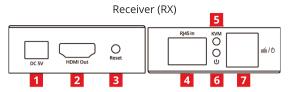

1. Power lack: DC 5V/1A

2. HDMI Output: Connect to HDMI display

3. **Reset Button:** Press to restart the device

4. RI45 In: Connect to Transmitter with Cat6 cable

5. KVM Indicator:

Light Off: the USB port and the computer have not established a connection Light Flash: the KVM data is transmitting Steady On: the USB port is connected to the

6. Power/Signal Indicator:

Light Flash: it is powered on, but no video data is transmitted


Steady On: the video data is transmitting

computer, but no KVM data is transmitted

 USB Port: for keyboard & mouse only Supports wireless keyboard & mouse combos, multimedia function keys, wake up PC from sleep



Application

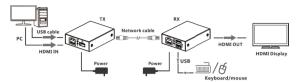



Q & A

Q: Why the Power LED is off?

 Please check if the power supply is connecting well and the output voltage value is correct as recommended 5V/1A

Q: Why does the power indicator always flashes?

- Check whether the network cable is uses IEEE-568B wiring standards.
- Check whether the source device and the transmitter are connected well.
- Reset the transmitter or receiver and connect it again.

Q: Why is the output image unstable?

- Check whether the length of the UTP cable connected from TX to RX is within 4K@30Hz video up to 130ft/40m, 1080p@60Hz video up to 230ft/70m
- The length of HDMI cable is recommended to be ≤ 33ft/10m.



Blank Page



Dear Valued Customer WE REALLY APPRECIATE YOUR PURCHASE

~thank you~

Support

For more info or tech support

http://www.siig.com/support

Mar. 2024

Copyright © 2024 by SIIG, Inc. All rights reserved.