


# Firmware Update Procedure



1. Go to  
<https://www.siig.com/hdmi-video-wall-over-ip-multicast-system-controller.html>
2. Click the **Downloads** tab.
3. Under **FIRMWARE**, click the **Download Firmware**.

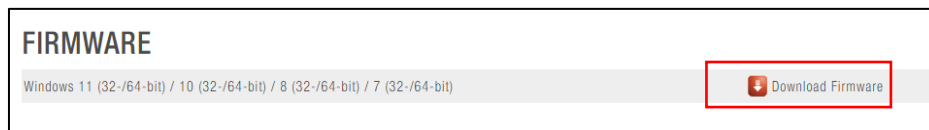

4. Log in **Web GUI** of controller box and then go to **Setup** page.
5. Click **FW Update** and click **Upload FW file (.zip)**



6. To find the **Firmware file** from the system **Downloads** folder and then click **Open**, the system will automatically update the firmware.

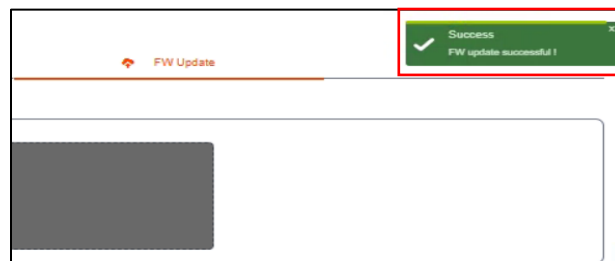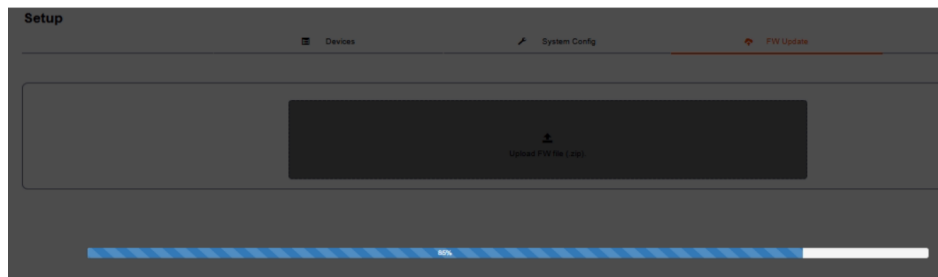

7. After **Success** appears the FW has been completed updated.
8. Unplug the power adapter from the controller box and then plug in the power adapter again to reboot the system.